

X1 Setup Guide

Please read before unpacking.

Getting started:

Make sure you have enough space to unpack your turntable.

Always unpack and setup in a clean environment

Important for warranty: Do not throw packaging away.

1 Unpack all items from accessory bag.



2 Remove dust cover carton from the box.



3 Lift the wrapped turntable out of the box.



4 Unpack the power supply.




5 Unpack the acrylic platter.




6 Carefully remove the protection covering.



7 Put the drive belt on the pulley & sub-platter.

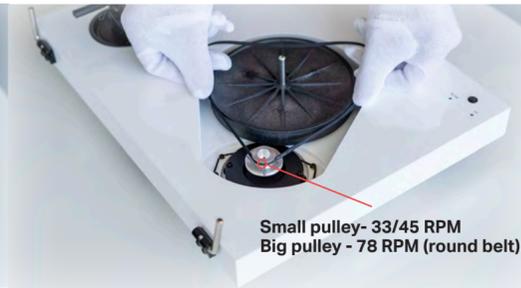

8 Put the platter on the turntable.

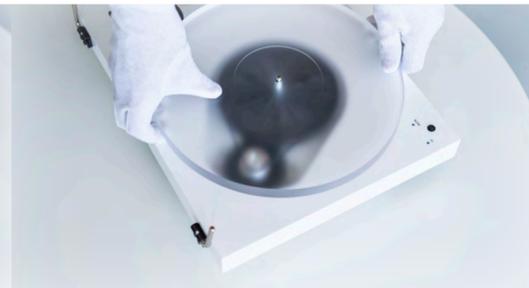

9 Remove tonearm twist tie.



10 Put the counterweight in place.



11 Remove the needle protection cover.



12 Lower the tonearm lift and place the tonearm between platter & armrest.



13 Balance the tonearm by turning the counterweight until it stays level.



14 Turn the front scale of the counterweight to Zero without moving the weight itself.



15 Turn the counterweight counterclockwise until the scale reads roughly 18.



16 Put the needle protection cover back on the cartridge.




17 Put the loop of the Antiskating Weight in the second groove on the tonearm



18 Unpack Dust Cover and put it on the turntable.



19 Plug in power supply and Connect it E.

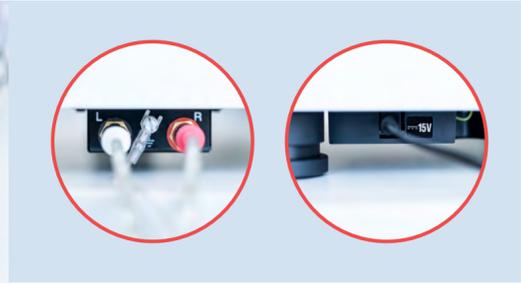

20 Connect to your sound system and you are ready to enjoy your records!



Technical Data

Speed	33, 45, 78 (electronic speed change)	Effective arm length	218,5 mm
Principle	belt drive	Overhang	18 mm
Speed variance	33: 0.30% 45: 0.25%	Effective tonearm mass	10,0g
Wow & flutter	33: 0.15% 45: 0.13%	Tracking force range	0 - 30mN
Platter	20mm thick, 1.5 kg heavy acryl	Power consumption	5,0 watts max / < 0.3 watt standby
Main bearing	stainless steel/brass	Dimensions	415 x 125 x 335 mm (WxHxD)
Tonearm	8,6" carbon/aluminium sandwich	Weight	7 kg net / 9.5 kg gross weight

www.project-audio.com/en/products/x1



Pro-Ject

AUDIO SYSTEMS

